



**830-001; 830-002; 830-004; 844-007;
844-010; 844-030; 844-040; 844-041;
844-042; 844-043; 844-046; 844-109;
844-111**

Operating Instructions

BEFORE USING THIS PRODUCT, READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

- This is a seasonal decoration and is not intended for permanent installation or year-round use. It is recommended not to use for more than 90 consecutive days.
- Do not attempt to inflate during unusually strong winds. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions before re-inflating.
- This is an electrical product – not a toy. Keep the product out of the reach of children to avoid any accidents or electrical shocks.
- Protect the electric fan and power cord from exposure to water. This precaution will reduce the risk of electrical shocks.
- Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.
- Do not expose the product to sharp items, as these may cause rupture and damage.
- The repair of the damaged main connection cable is only allowed for a qualified technician.
- Do not hang ornaments or other objects.
- Do not close door or window onto the power cord or extension cords, as this may damage the product's wire insulation.
- Do not secure the wiring of the product with staples, nails or other sharp objects, or place wiring on sharp hooks or nails.
- When the temperature is below 5° F (-15° C), the motor may temporarily stop running. The motor will begin functioning again higher temperatures.

WARNING: This inflatable has a plug that will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

To Set Up and Use

Remove contents from packaging.

1. Place inflatable in a clean, open area, free from obstruction or other debris.
2. Roll out fabric and lay out the contents.
3. Plug in the adaptor in the appropriate electric outlet.
4. Turn unit upright. Make sure the air intake of fan is clear of fabric and free of obstruction.
5. Be sure the zipper is closed in order for figure to fully inflate.
6. To secure the Inflatable from winds, insert a metal stake into the ground through each

- of the holes in the lower tabs of the inflatable figure.
7. To deflate, simply unplug from the outlet device and open zipper on back of inflatable. Do not unplug by pulling on cord.

Care and Maintenance

- Periodically check to ensure there are no holes or tears in the inflatable figure. If you find any tears in the fabric, you can repair them with needle and regular thread. No special thread is necessary.
- Only use mild detergent with cold water and damp a soft cloth to wipe clean the figure.
- Periodically unplug the product from the electrical outlet and allow the transformer and fan to cool to avoid overheating and/or product damage.
- Neatly fold and store the product in a cool, dry location that is away from sunlight or heat sources.
- Unplug, roll up and store in original package or similar size box.
- Do not wipe clean the motor.

Troubleshooting Guide:

Item will not fully inflate.	Ensure the zippers on the back of each inflatable figure are closed. Inspect fabric for tears and holes; repair if necessary. Make sure the fan is not obstructed by any debris or snow. Unplug the fan from the electrical outlet and let cool completely, before clearing debris.
Fan does not operate.	Ensure the fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet). Fan may be overheated. Unplug the fan from the electrical outlet and let cool completely.

**SAVE THESE INSTRUCTIONS
MADE IN CHINA**